ASSEMBLY AND INSTALLATION INSTRUCTIONS

LK30304

WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. The combined weight of your ceiling fan and light kit cannot exceed 35 pounds unless additional support is provided for the fan.

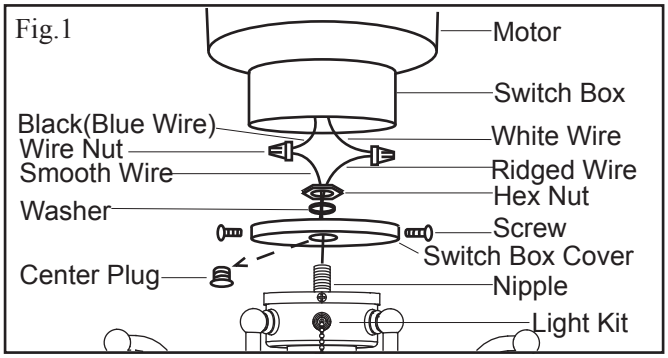

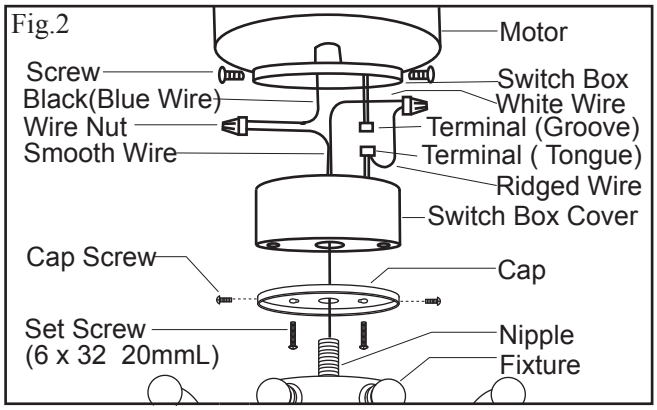

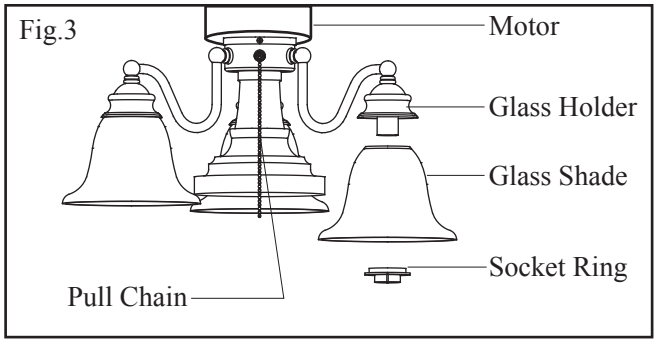

For Light Kit:

1. Remove the switch box cover from the switch box of the fan by loosing the three screws.
2. Unscrew the center plug from the switch box cover and discard it.
3. For fan as Fig.1: Attach the nipple of the light kit to the hole of the switch box cover. Thread the wires through the washer and hex nut, then secure them tightly.
4. For fan as Fig.2: Unscrew the cap screw to remove the cap from the light kit, then secure it upward to the switch box cover using the set screws (6x32 20mmL). Thread the wires of the light kit through the cap and switch box cover. Attach the light kit to the cap using the cap screw.
5. Pull out the outlet wires from the switch box. Make wire connections using the wire nuts:
   ---The smooth (marked) wire from the light kit to the blue wire from the fan.
   ---The ridged (unmarked) wire from the light kit to the white wire from the fan.
   ---Carefully tuck the wires back into the switch box cover.
6. Restore the switch box cover back to the switch box using the three screws.
7. Attach the glass shades upward to the glass holders, then secure them with the socket rings. (See Fig.3)
8. Install bulbs (not included). See relamping label at socket area or packaging for maximum allowed wattage.
9. Turn on the power at the main fuse or circuit breaker box.
   (You can control the lights with the pull chain.)

aireRyder™
070424

For Chandelier:

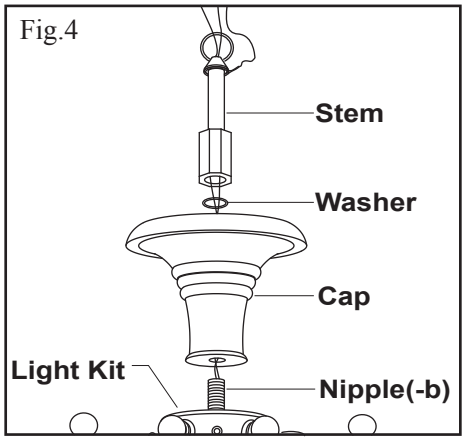

1. Take out the cap from the hardware package for chandelier.
2. Thread the fixture wires through the cap, washer and stem.
3. Attach the cap and the washer onto the light kit by inserting nipple(-b), then secure them with the stem.(See Fig.4)
4. Attach nipple(-a) to the mounting strap, then secure it with a washer and hex nut.
5. Attach the mounting strap to the outlet box using two mounting screws.
6. Choose the length of the chain you need, then weave the fixture wire and the fixture grounding wire through the chain links. Connect one end of the chainwith the loop using a loop lock.
7. Secure the top loop to nipple(-a).
8. Thread the fixture wire and fixture grounding wire through the collar, canopy, top loop, nipple(-a) and mounting strap.
9. Connect the other end of the chain with the top loop by using the other loop lock.
10. Pull out the outlet wires and the house grounding wire from the outlet box. Make wire connections using the wire nuts:
    ---The smooth wire (marked) from fixture to the black wire from power source.
    ---The ridged wire (unmarked) from fixture to the white wire from power source.
    ---Attach the fixture grounding wire to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with a wire nut.
    Carefully tuck the wires back into the outlet box.
11. Attach the canopy to the mounting strap by inserting the top loop and secure it with the collar.
12. Attach the glass shades upward to the glass holders, then secure them with the socket rings.
13. Install bulbs (not included). See relamping label at socket area or packaging for maximum allowed wattage.
14. Turn on the power at the main fuse or circuit breaker box. (You can control the light with the pull chain.)

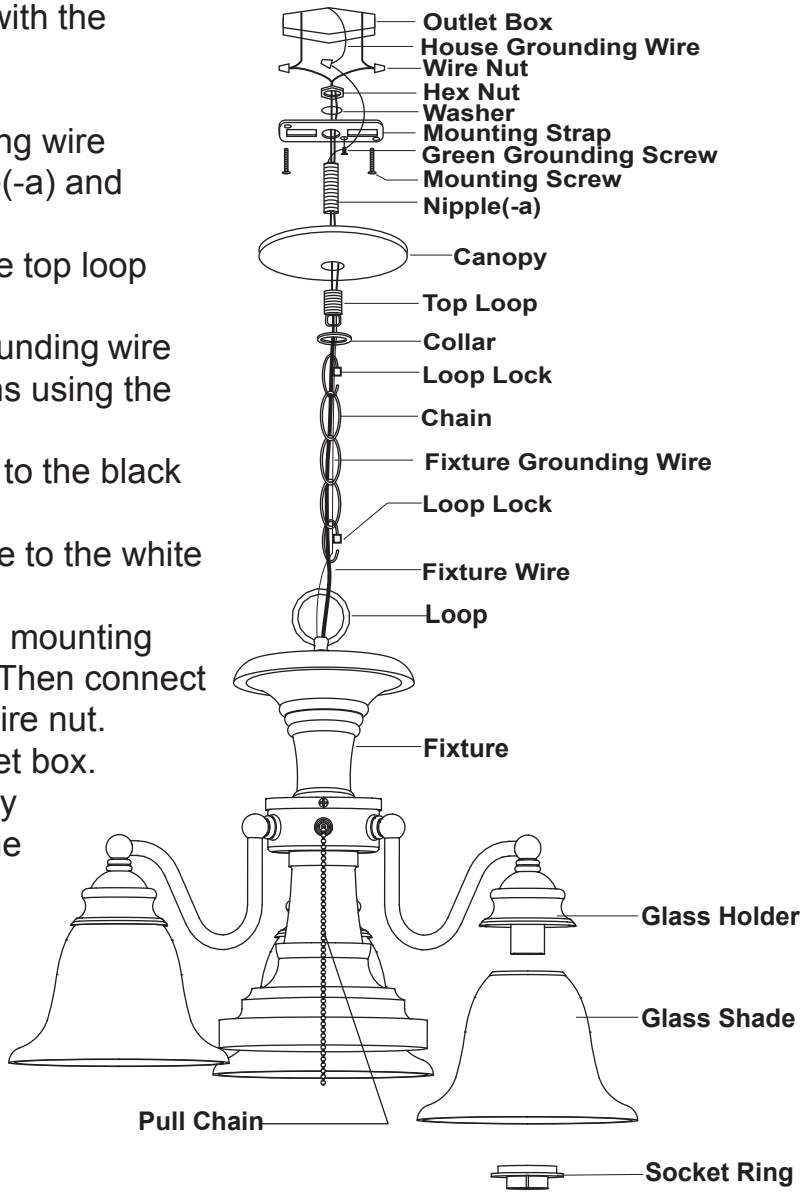

aireRyder™
070424